


# C5 OR C6 FOOTWELL LEDS



Using a flat blade screwdriver, carefully pry the footwell light housing out of the panel. Remove the factory bulb. DO NOT USE METAL OBJECTS TO REMOVE BULB TO AVOID BLOWING FUSE. Bulb may be hot.

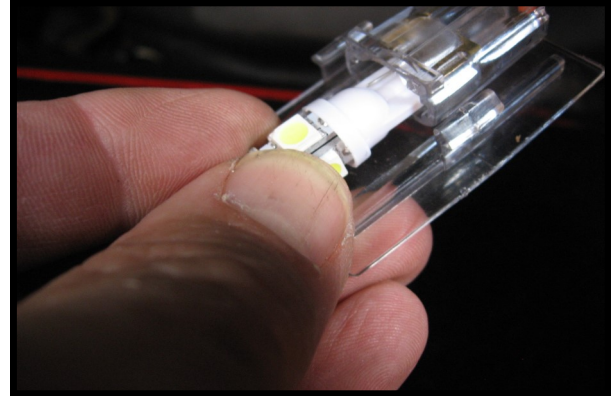

Install the led bulb into light housing. If it doesn't light, remove and turn it 180 degrees and re-install. It should now light. Make sure the interior lights haven't timed out which they will do every few minutes. Re-install light housing

