




CAMARO INTERIOR LED KIT

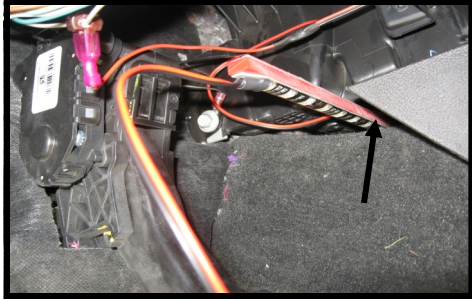


From the drivers side, pass solid led bar through the front of the console area to the passenger side. There is a open area above the carpet in front of the console.

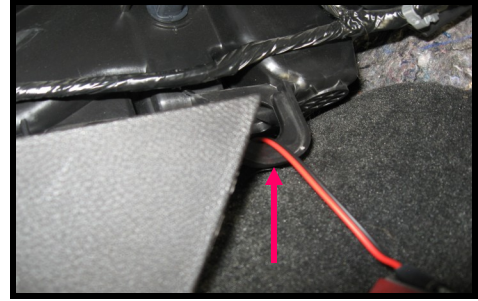


On the passenger side the red arrow shows a bracket that may get in the way. You can pass the light bar through the hole in the bracket or go around the bracket..

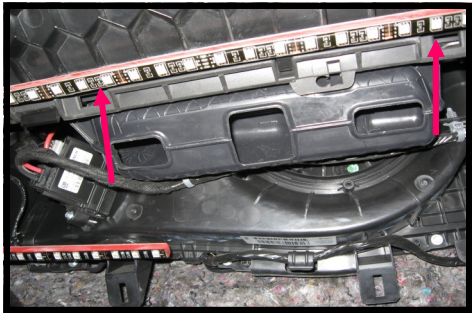


Center the light bar on the rib that goes across the bottom of the panel under the glove box door. Open the glove box door to be sure it doesn't hit the light bar. Peel and stick the light bar. You can also drill holes in the ribs and attach with wire ties.

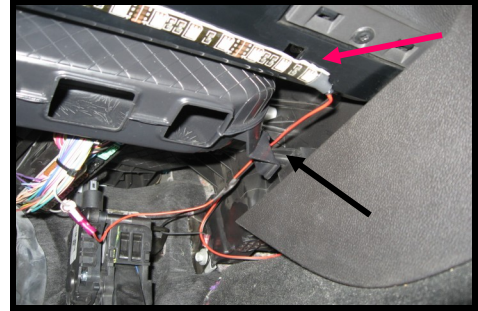


Pass the flexible drivers side led strip through this area (black arrow). After wiping mounting area with alcohol swab, attach led strip to panel under drivers area. (red arrow). If it doesn't stick well, rough up the mounting area with sandpaper or emery cloth, wipe with alcohol and attach strip.

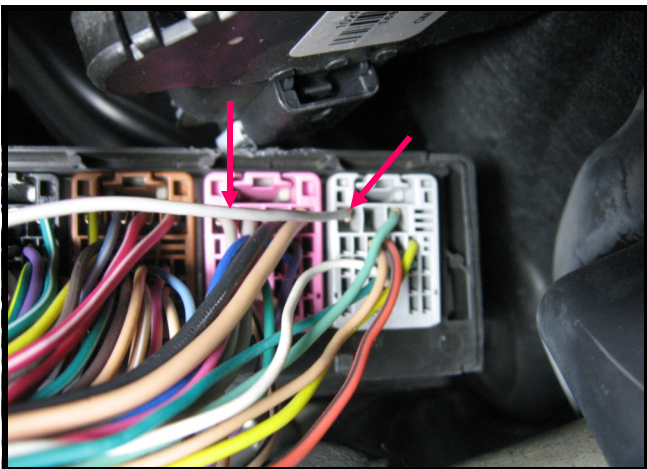

Look above the gas pedal for the module shown. The red arrow shows the gray wire in the gray plug that must be tapped into for the positive wire. There is a latch on the bracket you can push to pull the module down a little for easier access. Carefully cut one or two of the tie straps to make it easier to access this gray wire. Test with a test light to be sure you have the correct wire. Test light should mimick the dome light.

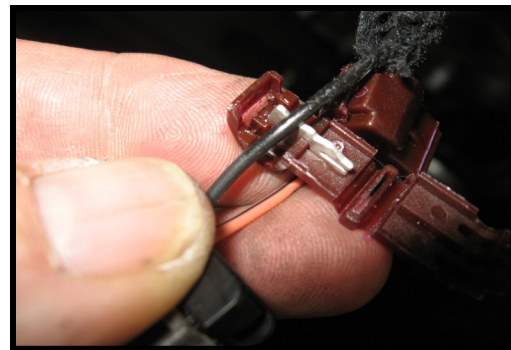

Using the supplied quick tap, Place the gray wire in the metal clip then close the connector . You may have to use pliers to make sure it latches. Plug the red wire from the led harness into the back of this connector and press firmly until it seats. It will be tight. See next picture.

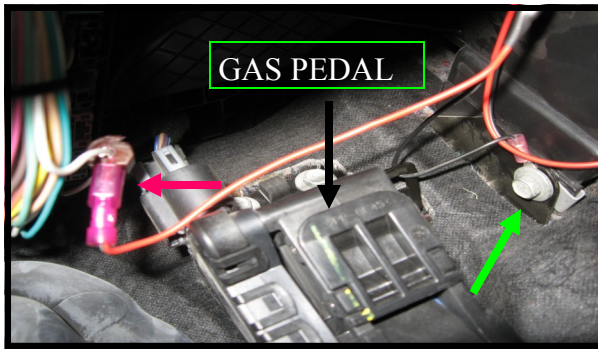

Red arrow shows positive wire fully seated in connector. Green arrow shows bolt for the ground wire. Remove bolt with a 10mm wrench, install ground wire and re-install bolt. Lights should now work with the interior lights. Be sure lights haven't "timed out". Secure all wires away from gas and brake pedal. That's it!

MAP LIGHT INSTALL



Using a small flat screwdriver, gently pry the map light lens from the housing.



Plug the led bulb into the factory position. Leds are polarity sensitive so if it doesn't light, turn it 180 degrees and re-install. Make sure the interior lights haven't timed out. Re-install the map light lense. That's it!!