

GN112 | Deluxe Weighted "Friction Style" Dash Mount for Garmin GPS



Adhesive Safety Hook

CM012 with GN014 Weighted "Friction Style" Dash Mount with pedestal for Garmin GPS

Patent Pending

Package Contents:

- (1) CM012 - Weighted "friction style" dash mount
- (1) GN014 - Suction pedestal with 17mm ball for Garmin devices
- (1) Optional adhesive safety hook (recommended but not required)
- (1) Alcohol cleaning pad

Compatible with Garmin® devices:

- Garmin Nüvi® - 200, 250, 260, 270, 300, 310, 350, 360, 370, 600, 610, 650, 660, 670, 680, 750, 760, and 770 models
- Garmin StreetPilot® - c310, c510, c530, c550, and c580 models

Garmin brand name and Nüvi and StreetPilot product names are trademarks or registered trademarks of Garmin International. Arkon Resources, Inc. is not affiliated with Garmin International.



Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.


Dash Mount Installation

Step 1. Find a safe location on the vehicle dash that is not in an air bag deployment zone or will obstruct view of the road.






Step 2. **Optional Safety hook installation will add extra stability.**

Clean the desired area with the included alcohol pad and let dry. Remove the adhesive backing on the safety anchor. The hook on the anchor must point towards the windshield. Press and hold the hook down on to the dash surface for about a minute. Allow 24 hrs. to cure to the dash surface at room temperature (72° F.)

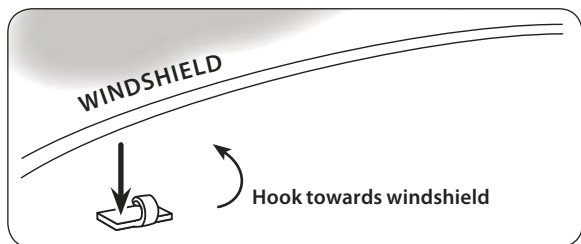

Step 3. Place the loop on the back of the dash mount around the safety hook and place on the dash in front of the hook.

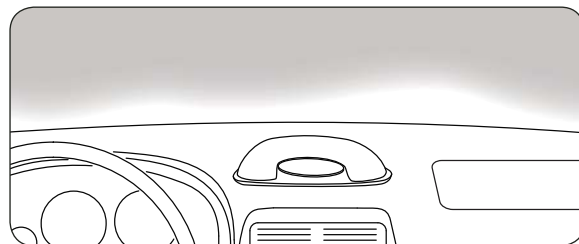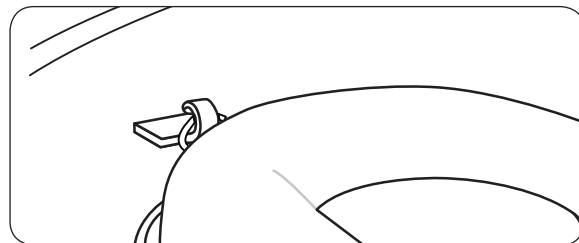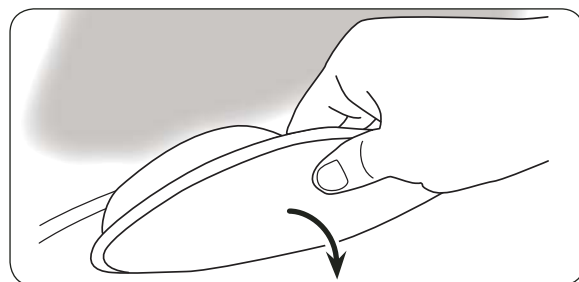

Continued on other side...



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and /or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

www.arkon.com


Arcadia, CA 91006 USA

Designed in USA | Made in Taiwan


© Copyright 2008 Arkon Resources, Inc.

Pedestal Installation

- Step 1. Place the suction cup of the pedestal down on the circular mounting disc in the center of the dash mount with the lever up.

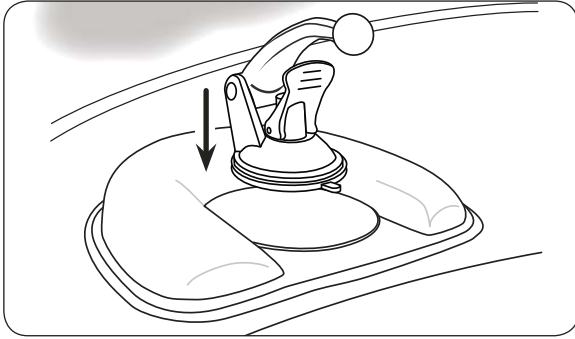


- Step 2. Flip the locking lever down to secure the pedestal to the dash mount. Adjust the angle of the pedestal arm by tightening the rotation knob.

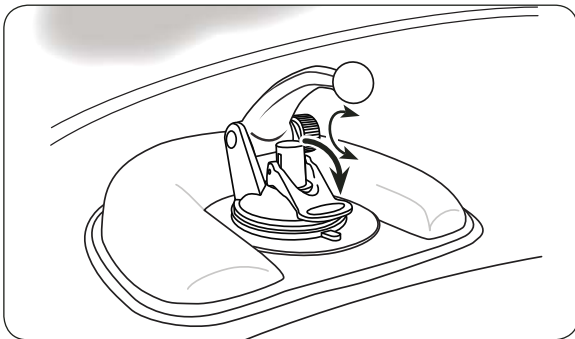

Garmin Device Attachment

- Step 1. Attach your Garmin GPS device (sold separately, not included) to the pedestal mount ball head by firmly pushing the ball into the socket on the back of the device. Adjust the screen angle of your device as needed.

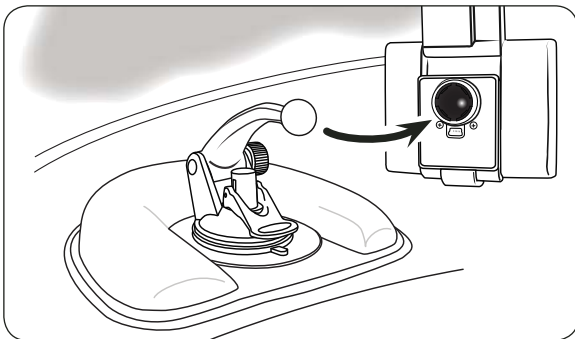

Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Designed in USA | Made in Taiwan

© Copyright 2008 Arkon Resources, Inc.