

IPM112 | Deluxe Friction Dashboard Mount for Apple® iPhone™

CM012 with CM014-KST-2
Friction Dashboard Mount
with Pedestal and Adhesive
Safety Hook



Patent Pending



CC005-IP
Custom Cradle
for iPhone

Package Contents:

- (1) CM012 - Weighted friction dashboard mount
- (1) CM014-KST-2 - Travelmount® mini windshield mount
- (1) CC005-IP - Custom cradle for Apple iPhone
- (1) Optional adhesive safety hook (recommended but not required)
- (1) Alcohol cleaning pad

Compatible with:

- Apple iPhone 3G and Original iPhone




Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.

Dash Mount Installation




- Step 1. Find a safe location on the vehicle dash that is not in an air bag deployment zone.



- Step 2. **Optional Safety hook installation will add extra stability.** Clean the area with the included alcohol pad and let dry. Remove the adhesive backing on the safety hook base. The hook curve must point towards the windshield. Press and hold the hook down on the dash surface for about a minute. Allow 24 hrs. to cure to the dash at room temperature (72° F).

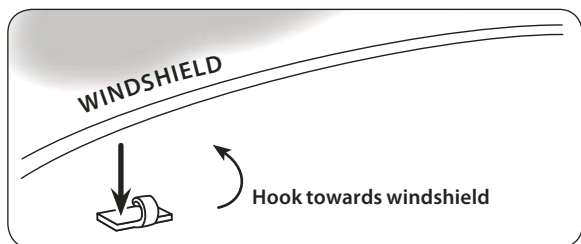


- Step 3. Place the loop on the back of the dash mount around the safety hook and place on the dash in front of the hook.

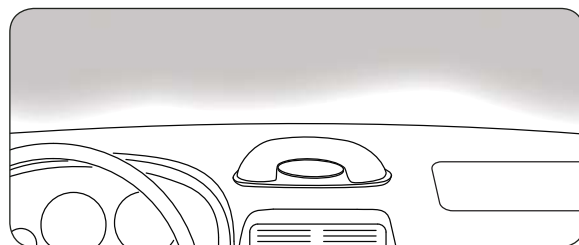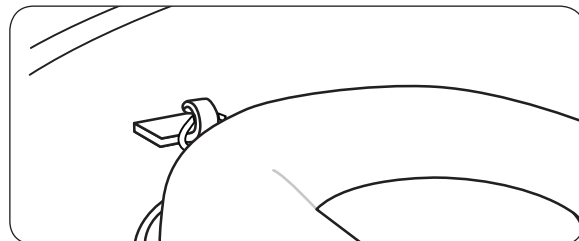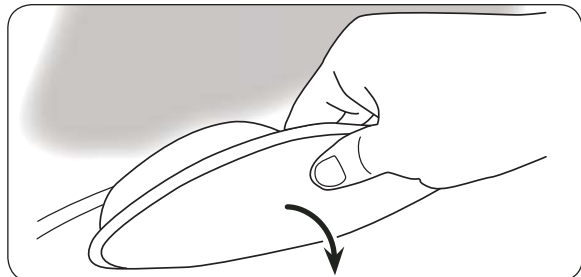

Dashboard Pedestal Installation

- Step 1. Place the suction cup of the pedestal down on the circular mounting disc in the center of the dash mount with the lever up.

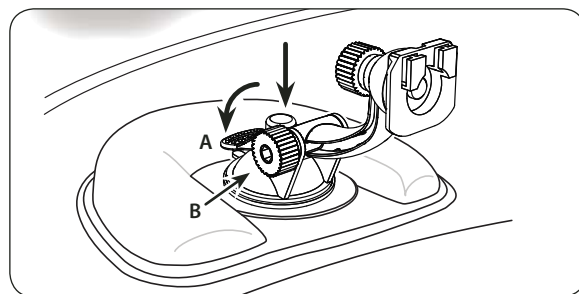

- Step 2. Flip the locking lever (A) down to secure the pedestal to the dash mount. Adjust the angle of the pedestal arm by tightening the vertical adjustment knob (B).

Continued on other side...



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™


Consumer Hotline:
USA (800) 841-0884
INT'L (626) 254-9005
Monday - Friday 9 am - 5 pm, PST

www.arkon.com
Arcadia, CA 91006 USA
Designed in USA | Made in China and Taiwan
© Copyright 2008 Arkon Resources, Inc.

Continued from previous side...


Connect iPhone Cradle to Pedestal

- Step 1. Connect the dual T-slots on iPhone cradle to the dual T-tabs on the pedestal head. Adjust the angle and rotation of the head by tightening the head adjustment knob (C).

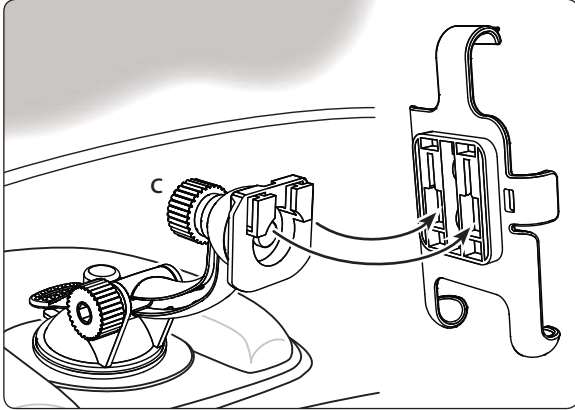

iPhone Insertion and Removal from Cradle

- Step 1. Lift and hold the upper thumb tab (D) while gently lowering the iPhone device (not included, sold separately) into the cradle.

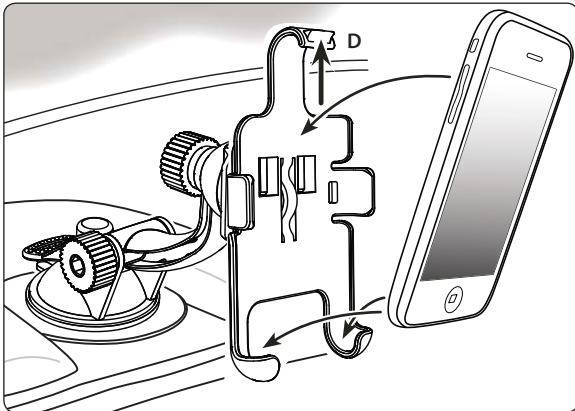

Apple brand name and iPhone product name are trademarks or registered trademarks of Apple, Inc. Arkon Resources, Inc. is not affiliated with Apple, Inc.



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Designed in USA | Made in China and Taiwan

© Copyright 2008 Arkon Resources, Inc.