

# SM212 | Deluxe Weighted "Friction Style" Mobile Phone Dash Mount

Adhesive Safety Hook



Weighted "Friction Style" Dash Mount with Pedestal



SM020-2 Universal Cradle

Patent Pending

## Package Contents:

- (1) CM012 - Weighted "friction style" dash mount
- (1) CM014-KST-2SH - Travelmount® mini windshield suction mount
- (1) SM020-2 - Universal mobile phone cradle / holder
- (1) Optional adhesive safety hook (recommended but not required)
- (1) Alcohol cleaning pad

## Compatible with:

- Most mobile phones, PDAs, and MP3 players




Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.

## Dash Mount Installation




- Step 1. Find a safe location on the vehicle dash that is not in an air bag deployment zone.



- Step 2. **Optional Safety hook installation will add extra stability.** Clean the area with the included alcohol pad and let dry. Remove the adhesive backing on the safety hook base. The hook curve must point towards the windshield. Press and hold the hook down on the dash surface for about a minute. Allow 24 hrs. to cure to the dash at room temperature (72° F).

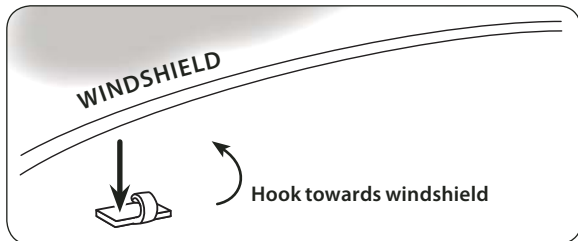


- Step 3. Place the loop on the back of the dash mount around the safety hook and place on the dash in front of the hook.

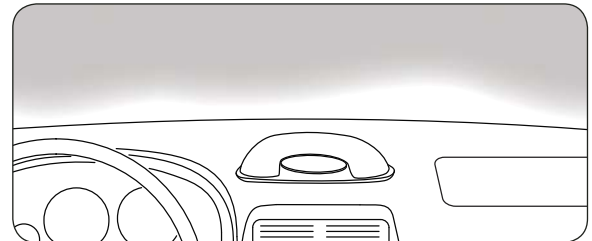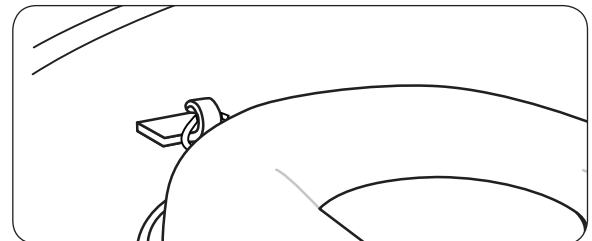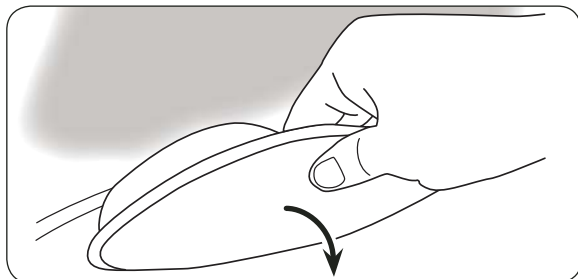

## Dashboard Pedestal Installation

- Step 1. Place the suction cup of the pedestal down on the circular mounting disc in the center of the dash mount with the lever up.

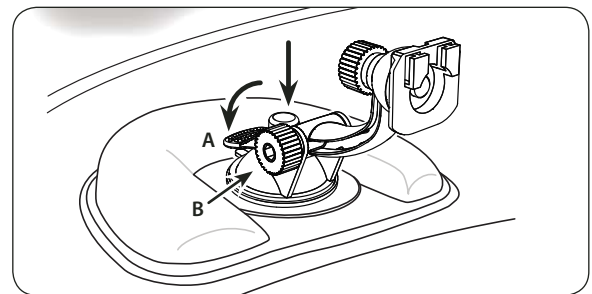

- Step 2. Flip the locking lever (A) down to secure the pedestal to the dash mount. Adjust the angle of the pedestal arm by tightening the vertical adjustment knob (B).

Continued on other side...



## Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

**ARKON**  
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:  
USA (800) 841-0884  
INT'L (626) 254-9005  
Monday - Friday 9 am - 5 pm, PST


[www.arkon.com](http://www.arkon.com)  
Arcadia, CA 91006 USA  
Designed in USA | Made in China and Taiwan  
© Copyright 2008 Arkon Resources, Inc.

## SM212 | Deluxe Weighted "Friction Style" Mobile Phone Dash Mount

Continued from previous side...

### Connect Cradle to Pedestal

Step 1. Connect the universal cradle to the pedestal head by inserting the dual T-tabs into the dual T-slots on the back of the cradle.

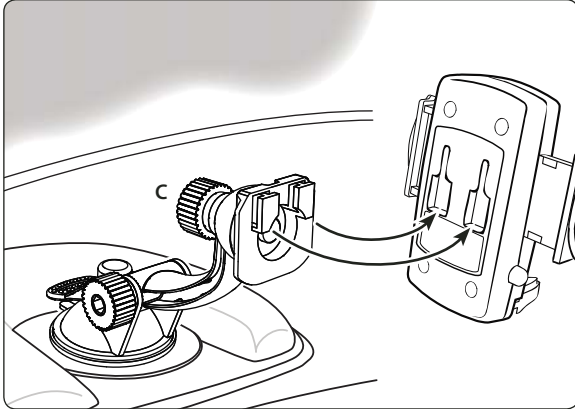


Step 2. Adjust the angle and rotation of the head by tightening the head adjustment knob (C).

### Device Attachment and Universal Cradle Adjustment

Step 1. If necessary, adjust the support legs (D) by sliding them laterally. These provide support for your device.

Step 2. Place device on the support legs (D) and squeeze the side grip arms (E) until they fit securely to the device.

Step 3. Push the release button (F) in order to release the device from the cradle.

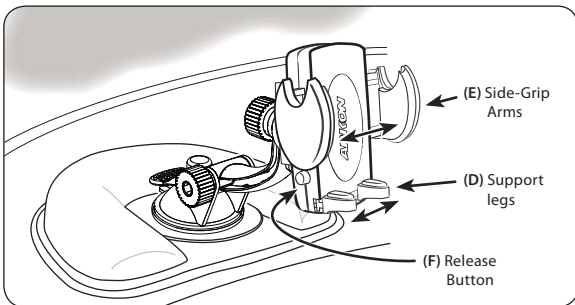

#### Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

**ARKON**  
**RESOURCES INC.**

*The Mobile Mounting Specialists™*

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

[www.arkon.com](http://www.arkon.com)

Arcadia, CA 91006 USA

Designed in USA | Made in China and Taiwan

© Copyright 2008 Arkon Resources, Inc.