

## **Chevrolet Corvette C6 Z06 2006-Up Side Skirt Installation** **Manual**

**Components List:**

2 x Side Skirts  
2 x Wheel Well Extensions  
10 x Self-tapping Screws  
4 x M5 Bolts  
4 x M5 Nuts  
4 x M5 Washers

**Approximate Installation Time:**

1.5 Hours



**Installation Procedures:**



1. Remove 3 bolts from the bottom of the front fender, just ahead of the door.



2. Remove 1 bolt from the bottom just behind the door.



3. Remove 1 bolt in the rear wheel well just ahead of the rear tire, then attach the wheel well extension using the original bolt.



Don't tighten all the way yet.



4. Peel away a small portion of the adhesive backing tape at the rear of the side skirt.



5. Attach the side skirt using the original bolts that were removed (3 at the front, 1 at the rear).



Don't tighten all the way yet.



6. Align the wheel well extension to the side skirt, then secure using the provided bolts, nuts, and washers.

Tighten the bolts, nuts, and washers.



**\* It is highly recommended that 2 people perform this step.**

7. With the tape backing still attached to the side skirt, check the side skirt fitment by holding it up against the rocker panel. Make sure the side skirt aligns properly without any gap.
8. Once the fitment is confirmed, begin peeling away the tape backing at the rear of the side skirt, and begin attaching the side skirt to the rocker panel.

**\* Important: The other person should hold up the front of the side skirt to ensure that the side skirt remains aligned properly throughout this entire process.**

9. Carefully peel the remainder of the tape and attach the rest of the side skirt to the rocker panel, moving slowly toward the front.

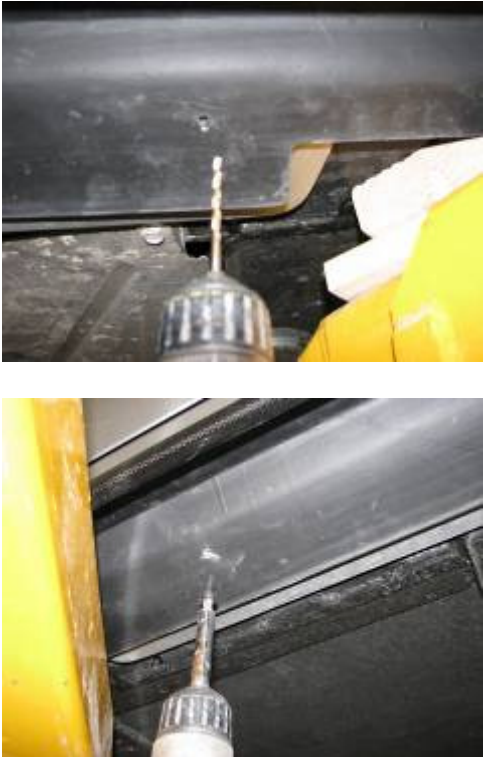



10. There are 2 additional holes in the rear wheel well extension. Drill through these holes using a 1/8" drill bit, then attach the provided self-tapping screws.

Top hole shown.



Bottom hole shown.

	<p>11. There are 2 additional holes in the side skirt. Drill through these holes using a 1/8" drill bit, then attach the provided self-tapping screws.</p>
	<p>12. Tighten all the remaining bolts.</p>
	<p>13. Repeat above steps for the other side of the car.</p>
	<p><b>Installation is now complete!</b></p>