



CAMARO TRUNK LEDS

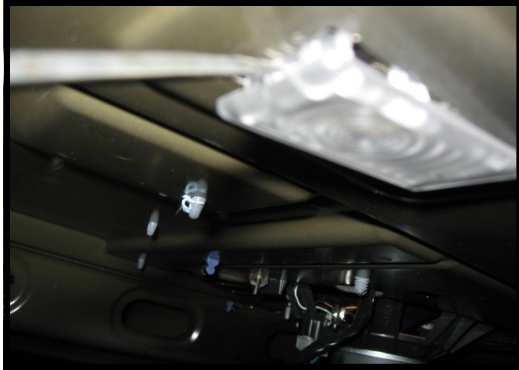

Using a small flat blade screwdriver, carefully pry the trunk light out of its opening and remove the bulb. Don't use anything metal to remove it as you may short out the contacts.

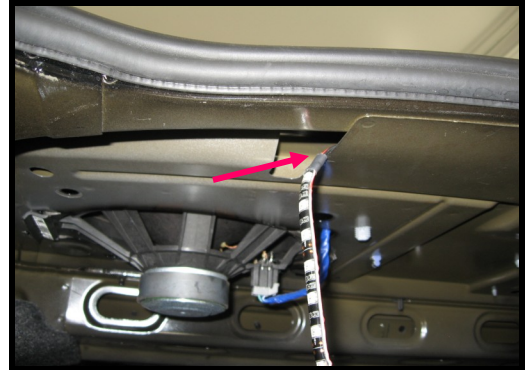

Pass the led wires through this opening and route them so they come out the factory light opening.



This shows the led wires coming through the factory light opening. Simply plug in the white connector into the factory light socket aligning the black wire with black and red wire with the orange/black stripe wire. Test led lights. If they don't light make sure the interior lights haven't timed out or turn the socket 180 degrees as you may not have the wires lined up properly.



Next wipe your selected mounting area with the supplied alcohol wipe. Center the strip, peel the adhesive backing and attach the led strip in desired position. Enjoy the new lights!