


C5 & C6 TRUNK/HATCH LEDS


The first thing to do is decide which position you want to install the led strip. Power up the strip with a 9 volt battery or a 12 volt power supply such as a battery charger. There are 3 different positions on the c5 convertible but really only 1 place on the c5 coupes and c6 coupes and convertibles. See photos below. Once you decide where to mount them, wipe the mounting area with supplied alcohol swabs as ARMOURALL may have been applied in the past. Route the wires behind the panels or weather stripping and tap into the rear compartment lamps with supplied quick taps.

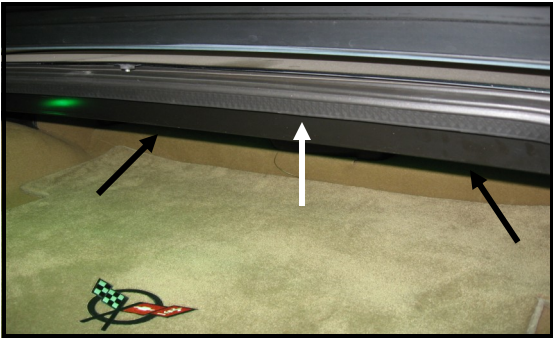


This shows 2 areas on the c5 convertible. Bottom of the large square brace (black arrows). Between the trunk weather strip and the square brace (white arrow) They can also be applied as in the next picture..



On C5 convertibles: Front edge of the weather strip pointing forward into the trunk. The C5 coupes, C6 convertibles and C6 coupes use this same mounting area. Be sure to clean weather strip with alcohol swabs as armour all may have been applied.

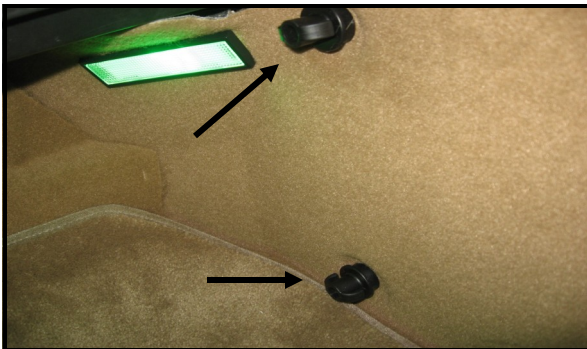

Remove 2 cargo net nuts and light to gain access to wiring behind carpet panels. Route wires from led strip behind panels on either side to area near the factory lights.

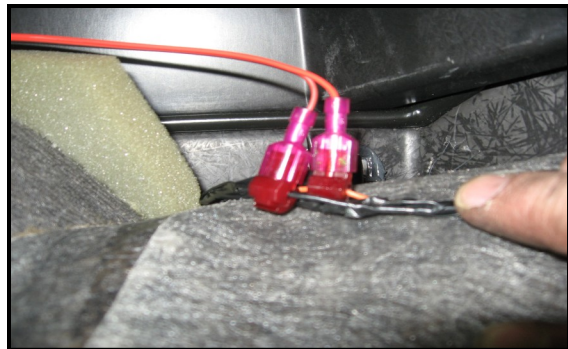

Using the supplied connectors, tap into the factory wires. Fold and crimp connectors using pliers, then plug led wires into the back of the connectors you just installed. Connect red to orange and black to black. If the leds don't light, check all connections and make sure the lights have not timed out after about 15 minutes. Re-assemble all panels and enjoy the new lights!